


F18 HANDLE+ T1 SUPER TAURUS THROTTLE BASE

User manual

V 1.1

| | | |
|-----|---|-----------|
| 1 | F18 油门系列介绍..... | 错误!未定义书签。 |
| 1.1 | Function introduction..... | 2 |
| 1.2 | Throttle Operation Instructions..... | 5 |
| 2 | F18-TGRIP-L\F18-TGRIP-R..... | 10 |
| 2.1 | Switches and Button function introduction installation..... | 10 |
| 3 | F18-STARTUP(Side Panel) Product Introduction | 11 |
| 3.1 | Function introduction..... | 11 |
| 3.2 | Side panel installation and uninstall (factory installed) | 13 |
| 4 | T1-HOLDER..... | 14 |
| 4.1 | Throttle desk mount adjustment instructions | 14 |
| 5 | Other installation methods (Official advice)..... | 17 |
| 5.1 | Gaming chair installation..... | 17 |
| 5.2 | Cockpit installation | 19 |

1 T1 SUPER TAURUS THROTTLE BASE Product Introduction

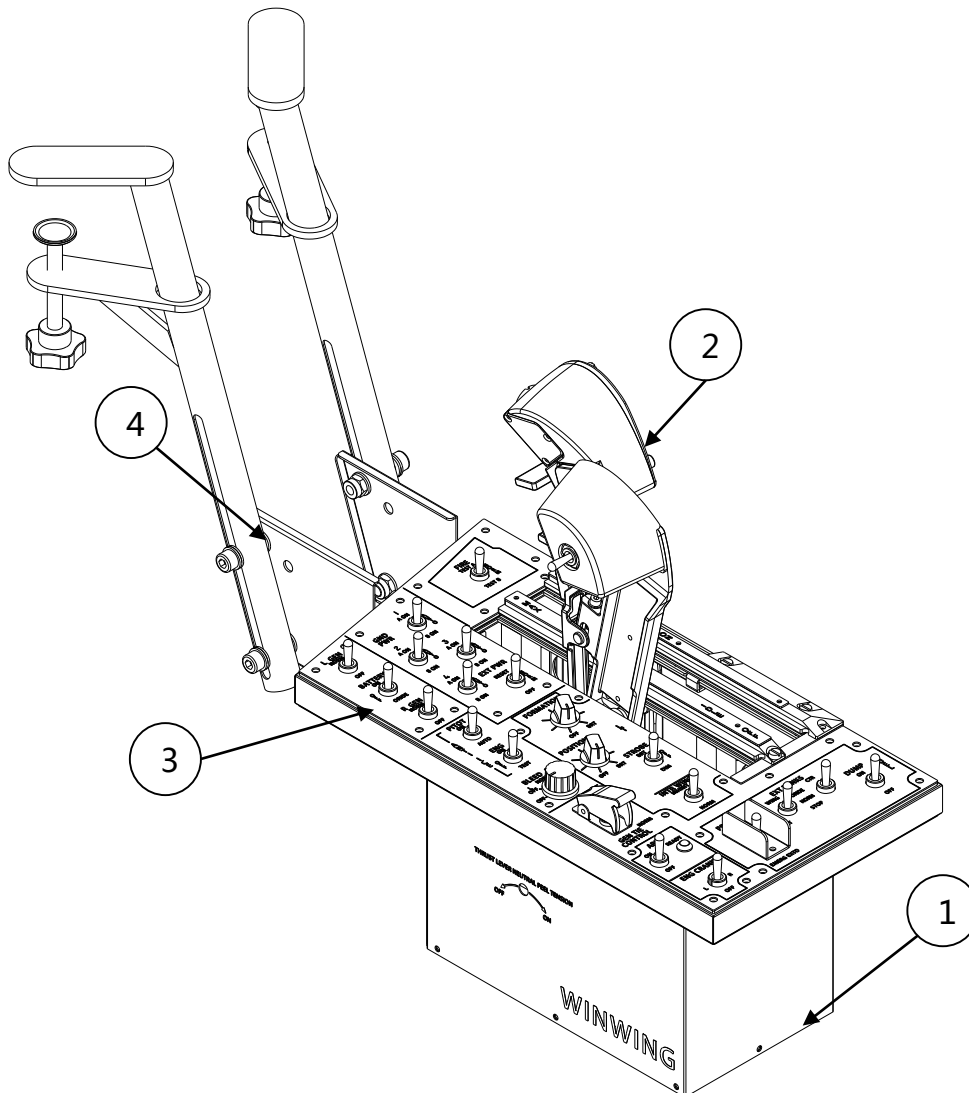


- ① Throttle Base (4kg)
- ② F/A-18 L/R Throttle Grips (1kg)
 - 4 of M4 10mm-type Allen screws
 - to attach the changeable throttle grip
- ③ F/A-18 Throttle Side Panel (1.4kg)
- ④ Throttle Desk Mount Holder (1.5kg)
 - Includes Installation screws and Blocks

- Install Info please see Throttle install page


1.1 Function introduction

1.1.1 Functions of throttle

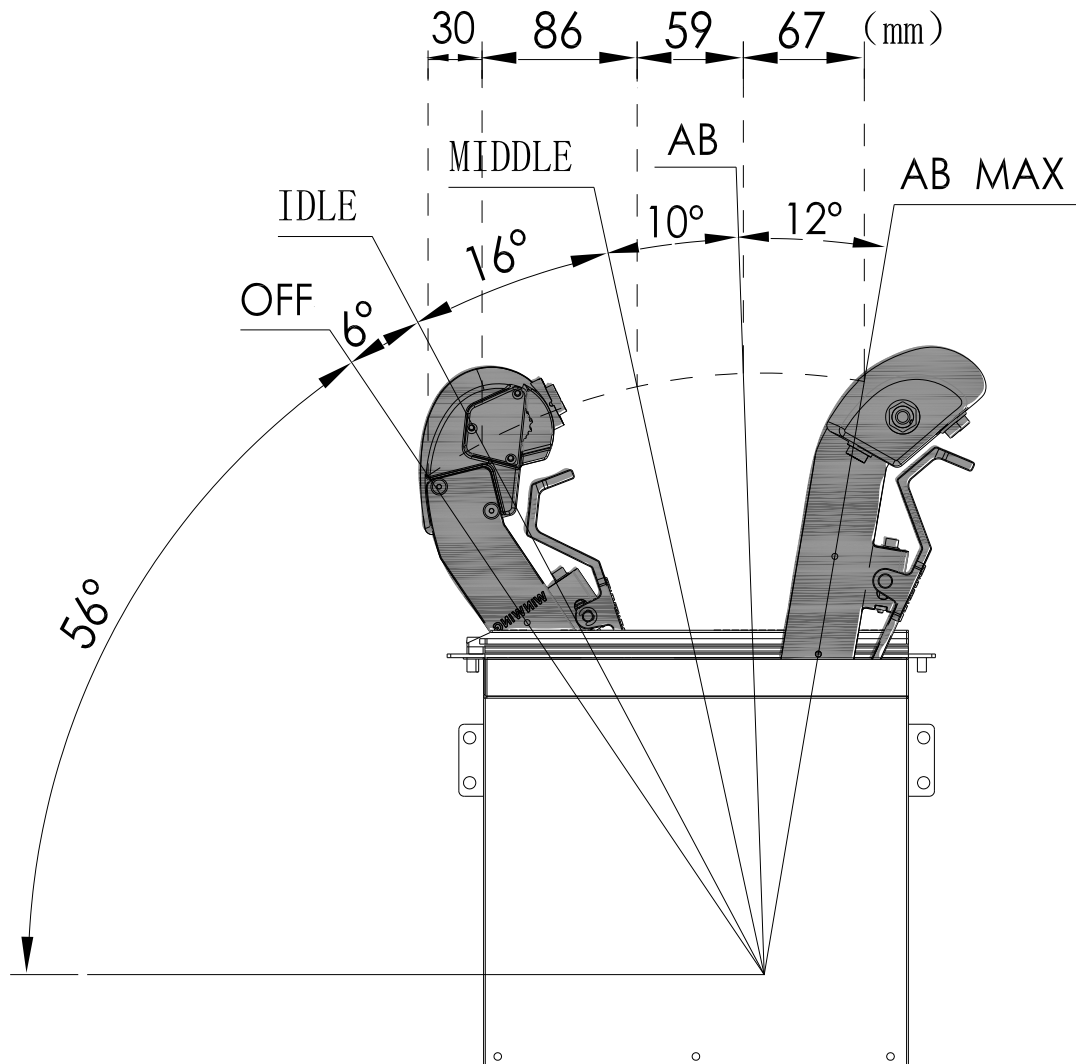


1. The minimum angle between the arm and the horizontal plane is 56° , The maximum angle is 100° . The total stroke angle of the arm is 44° .
2. The total distance of the head stroke exceeds 242mm
3. MIDDLE gear is in the middle of the total stroke (22° angle to OFF)
4. Afterburner stroke range is 12°

1.1.2 Other functions

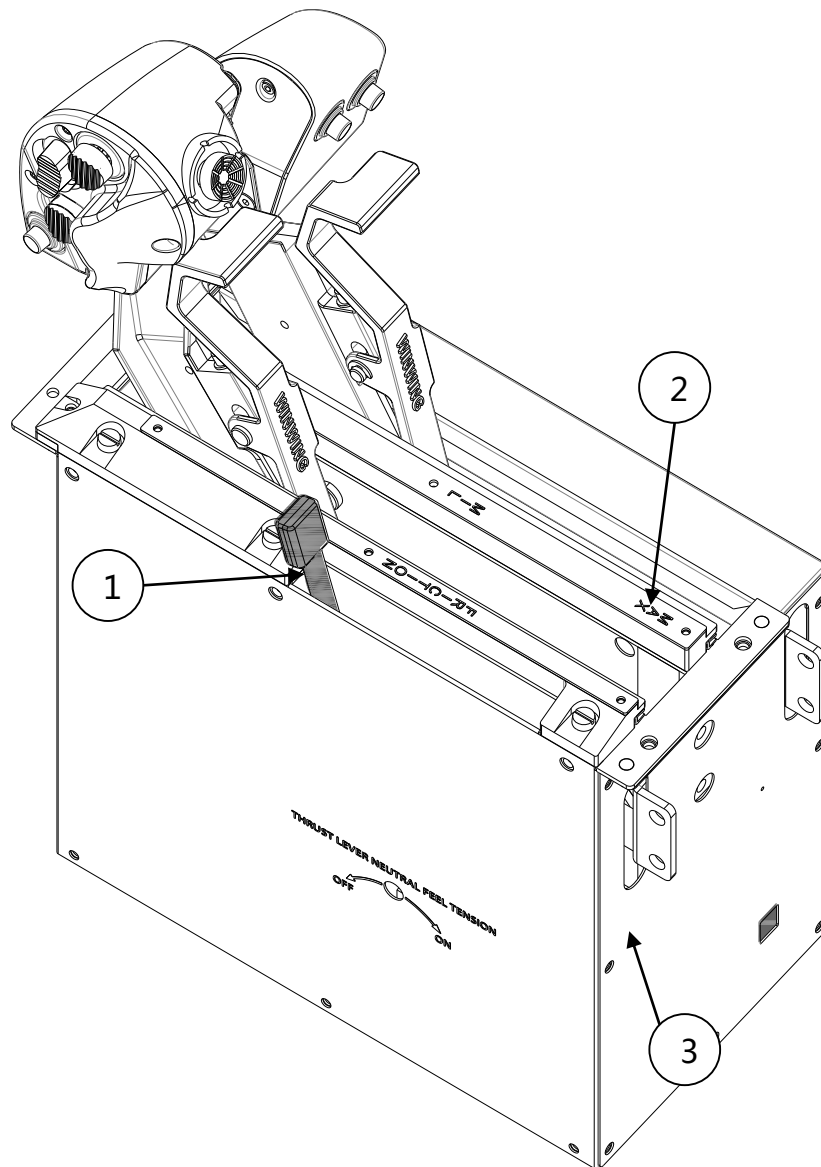

- ① Damping adjustment
- ② characters with backlight
- ③ USB port

1.1.3 Installation Template

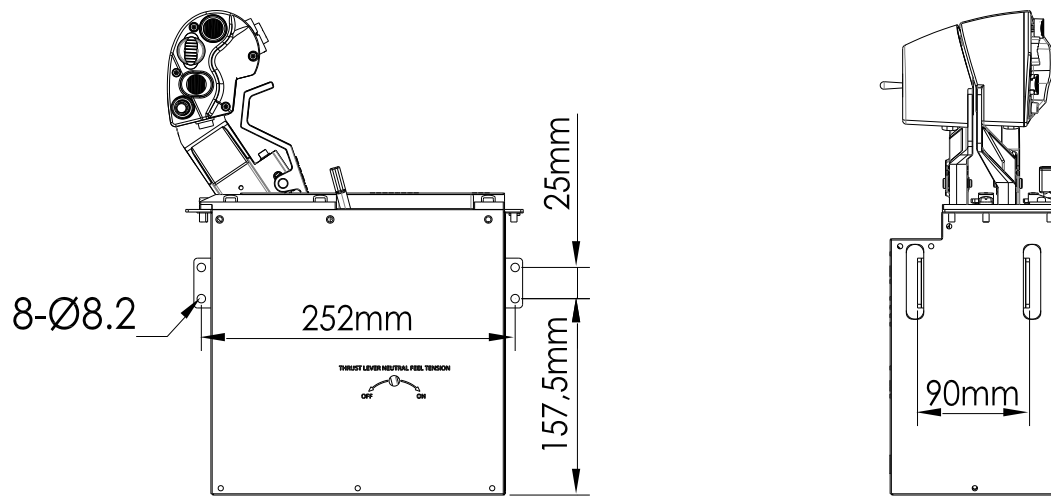

Mounting size as shown on picture


- If you need 2D Template. Click to (www.winwing.cn)

1.2 Throttle Operation Instructions

1.2.1 Instructions of use for different gears

OFF Position

Afterburner

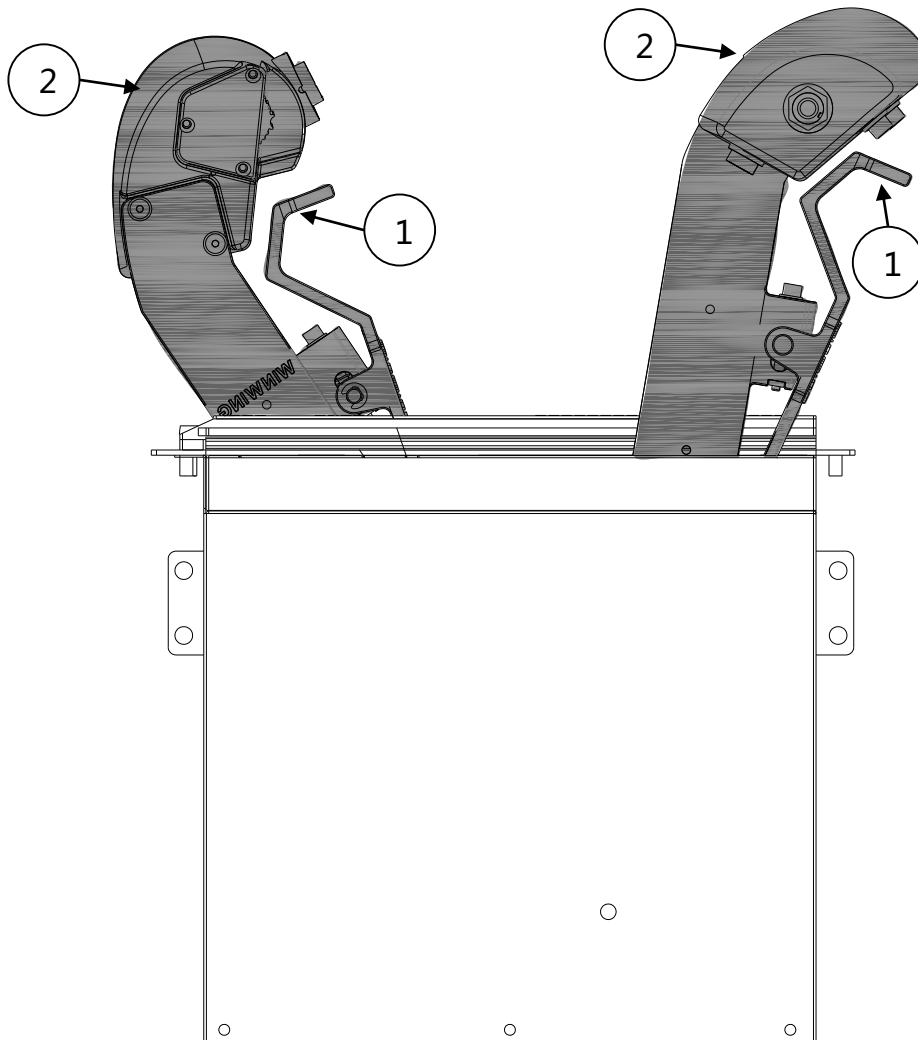

- When leaving and entering the OFF position, operate as shown on the figure.

- ① Lift the lever up first
- ② Moving the Grip to target place

- Enter the afterburner, there are two ways to operate


The first type:

- ① Lift the lever up first.
- ② Push the grip forward.

The second type

Go directly to the second step. Push the grip hard, and the lever will automatically unlock. (We prefer to use the first step of the operation. This helps the product to last longer.)

1.2.2 Instructions of throttle grip sync

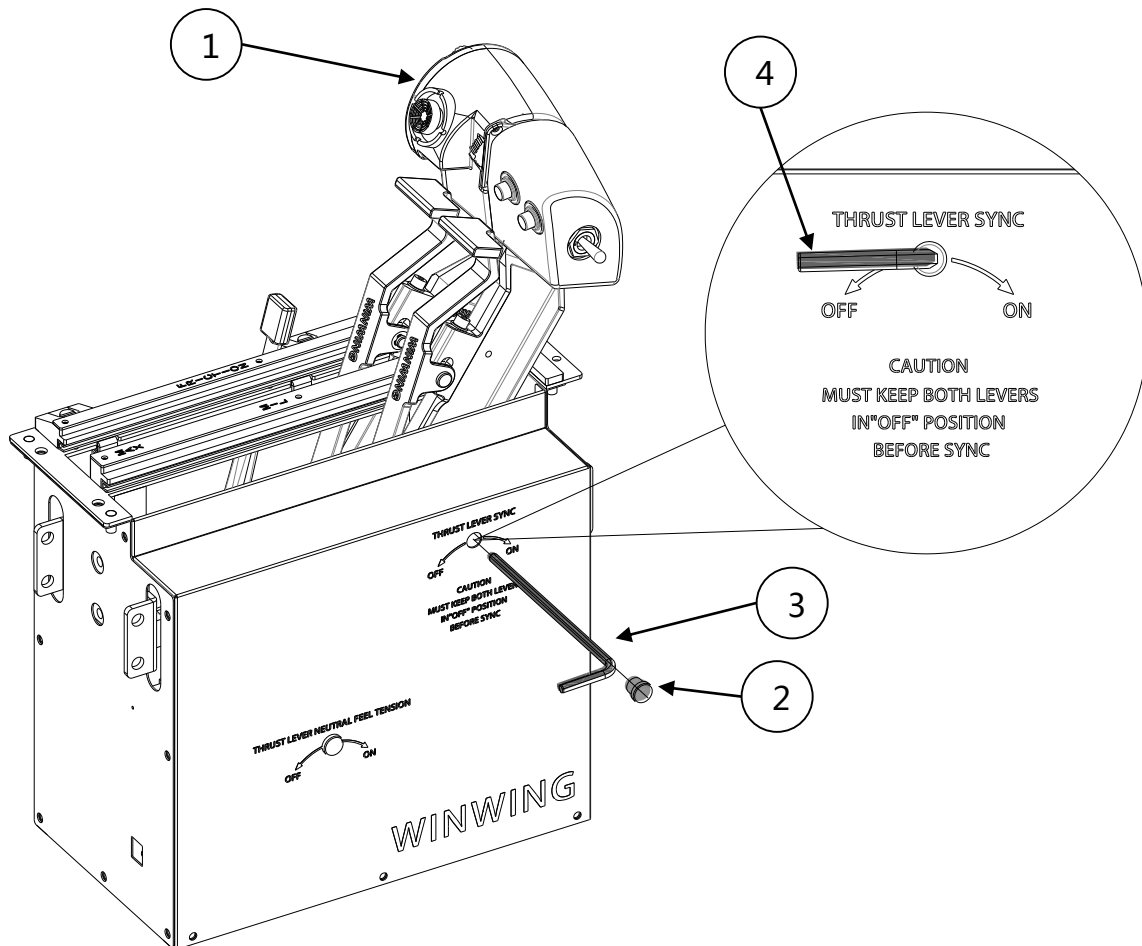

● The L / R throttle synchronization prompt structure can be turned on by mechanical adjustment.


- ① Put the throttle arms in OFF
- ② Remove the dust plug of the adjustment port
- ③ Insert Allen screw driver
- ④ Rotating screwdriver adjustment


Turn the screwdriver counterclockwise until it can't rotate. This will cause the sync structure to OFF. Turn the screwdriver clockwise, every 1/2 turn, then try to synchronize whether the structure is ON

If the function is not turned on, continue to rotate the screwdriver.

- Please don't rotate too many turns at a time. This will damage the device.

1.2.3 Instructions of MIDDLE dent on/off

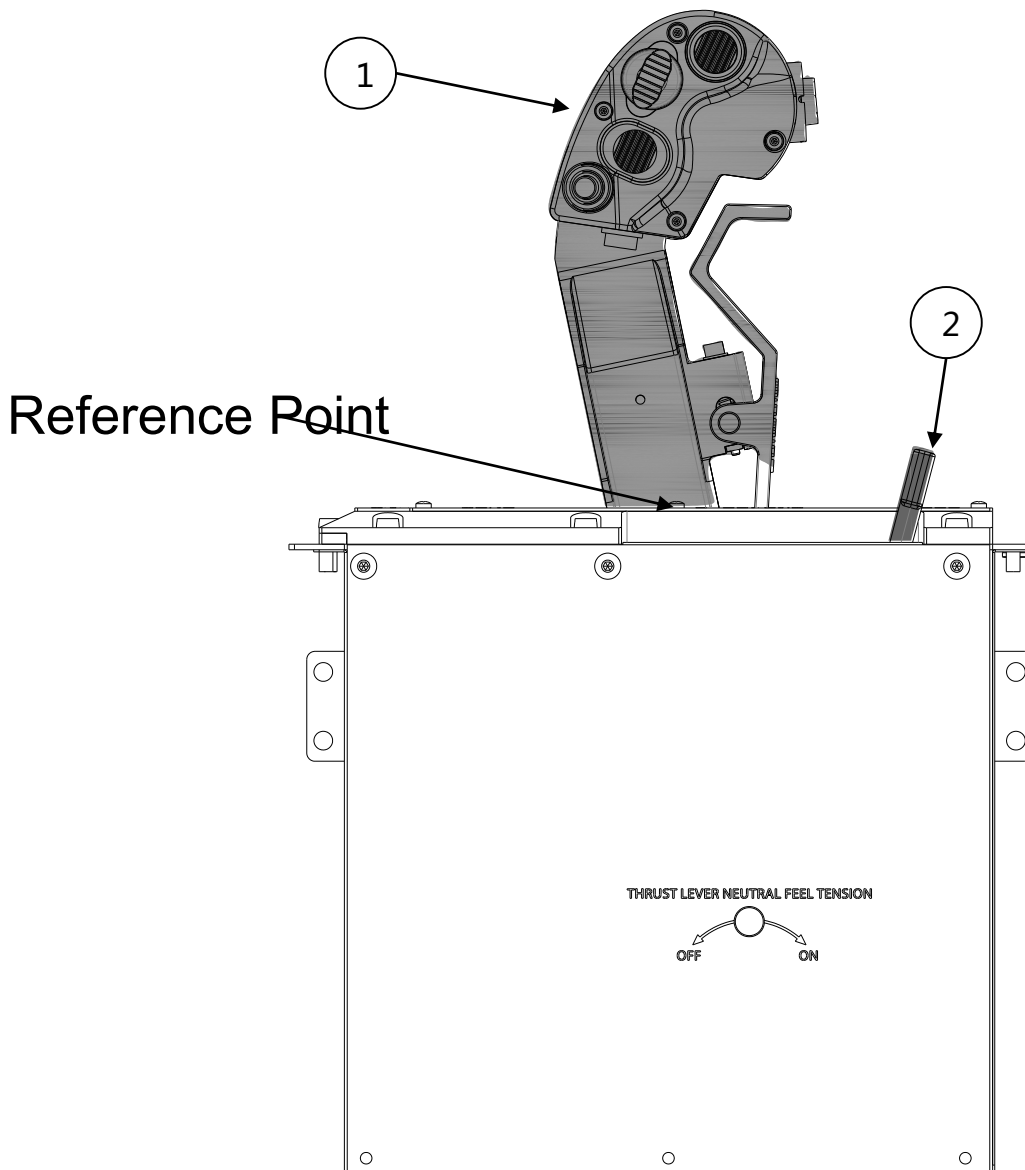

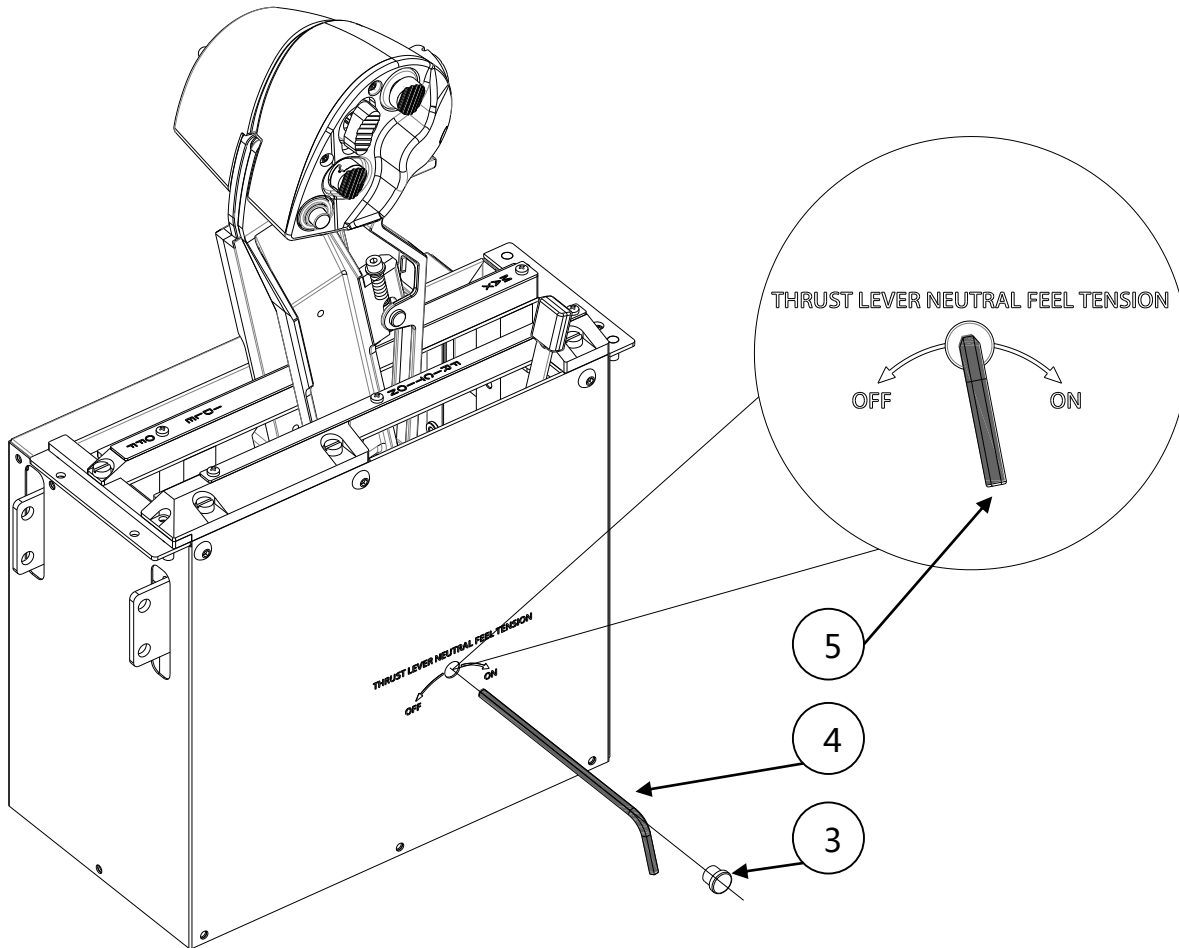


- MIDDLE scale adjustment (MIDDLE scale will brings additional resistance)

- ① MIDDLE scale adjustment (MIDDLE scale will brings additional resistance);
- ② urn the resistance lever to the maximum position.
- ③ Remove the dust plug of the adjustment port;
- ④ Insert Allen screw driver;
- ⑤ Rotating screwdriver adjustment.

Turn the screwdriver counterclockwise until it can't rotate, it means MIDDLE dent is OFF. Turn the screwdriver clockwise, every 1/2 turn, then try to MIDDLE dent is ON. If the function is not turned on, continue to rotate the screwdriver. The left and right adjustments are the same.

- Please don't rotate too many turns at a time. This will damage the device.


1.2.4 Instructions of Resistance adjustment

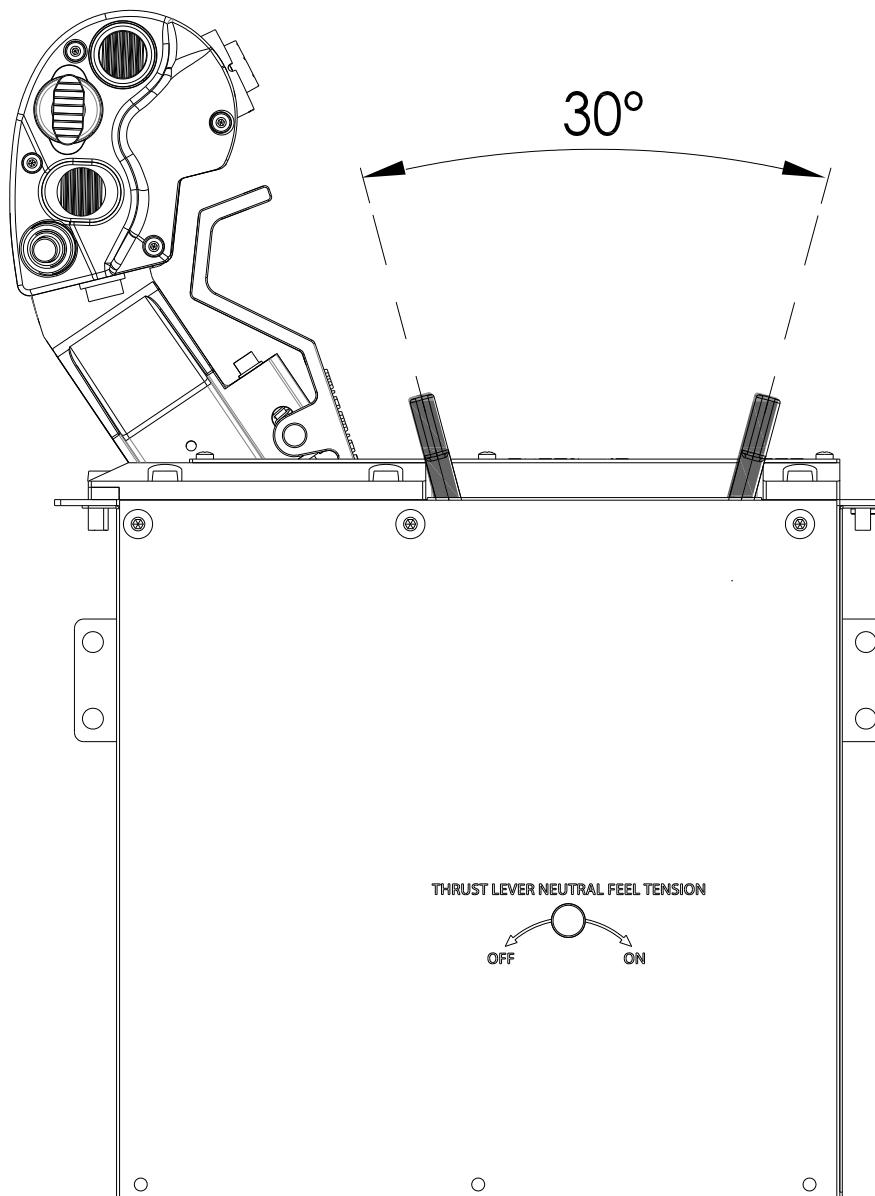

Resistance handle adjustable angle range is 30°. We recommend adjusting the resistance according to your personal habits to get the best operating experience.


2 F18-TGRIP-L\F18-TGRIP-R

2.1 Switches and Button function introduction installation

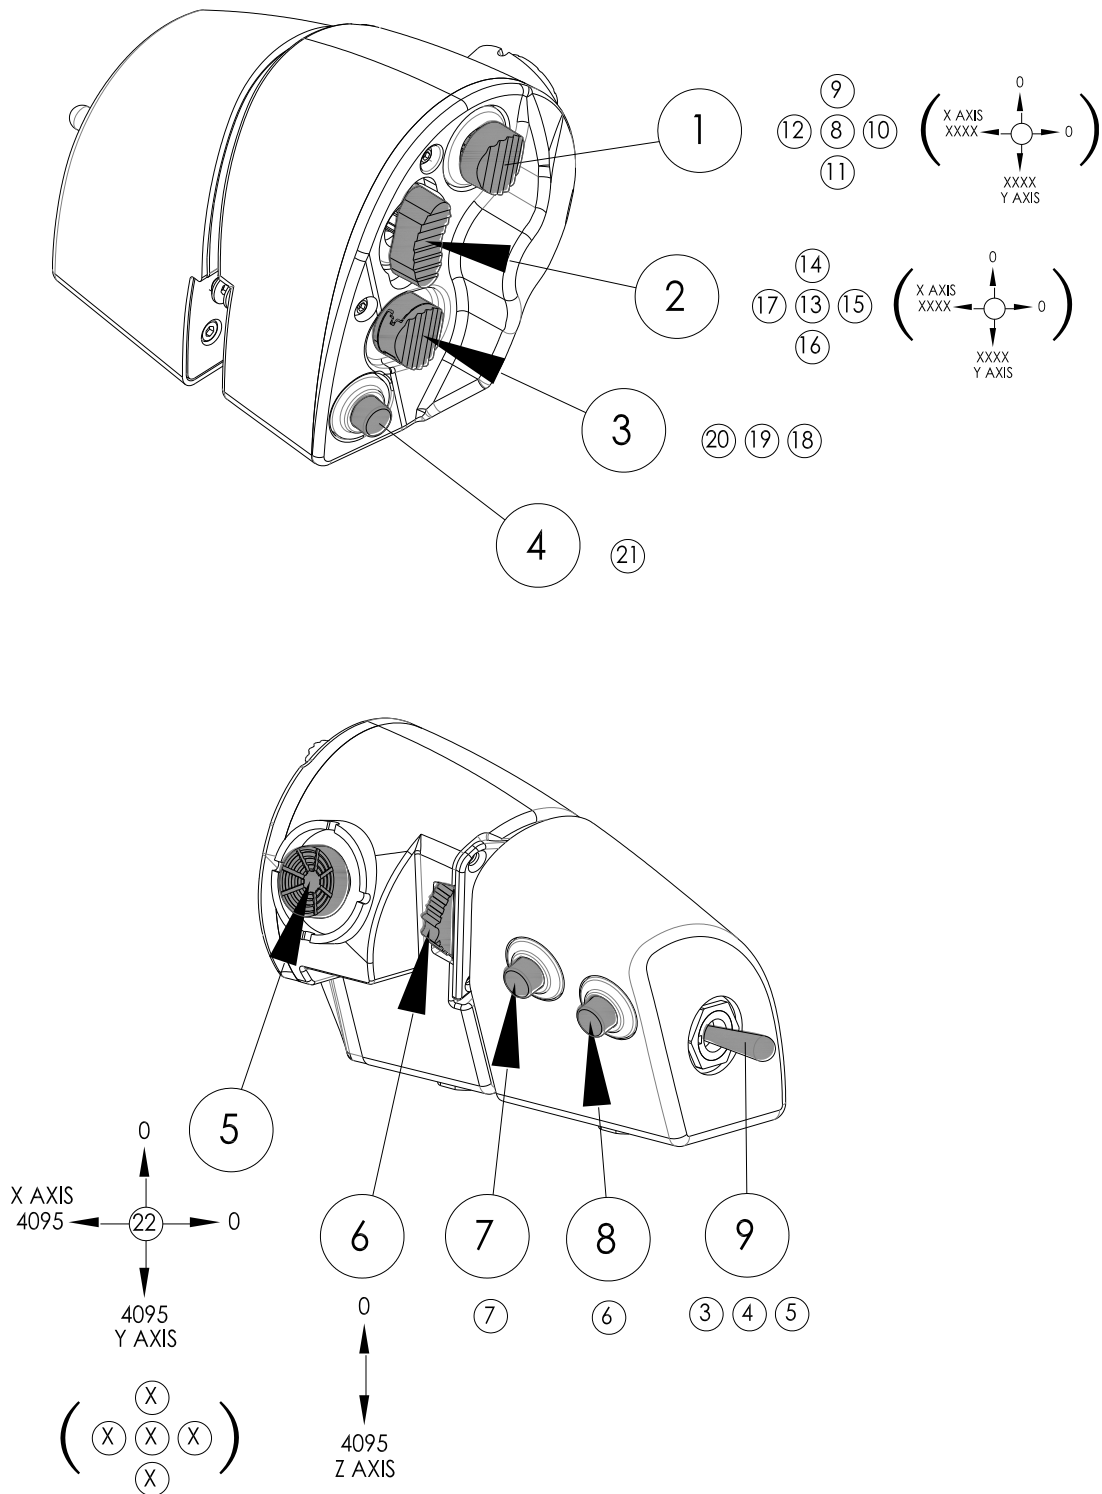


3 F18-STARTUP(Side Panel) Product Introduction

3.1 Function introduction

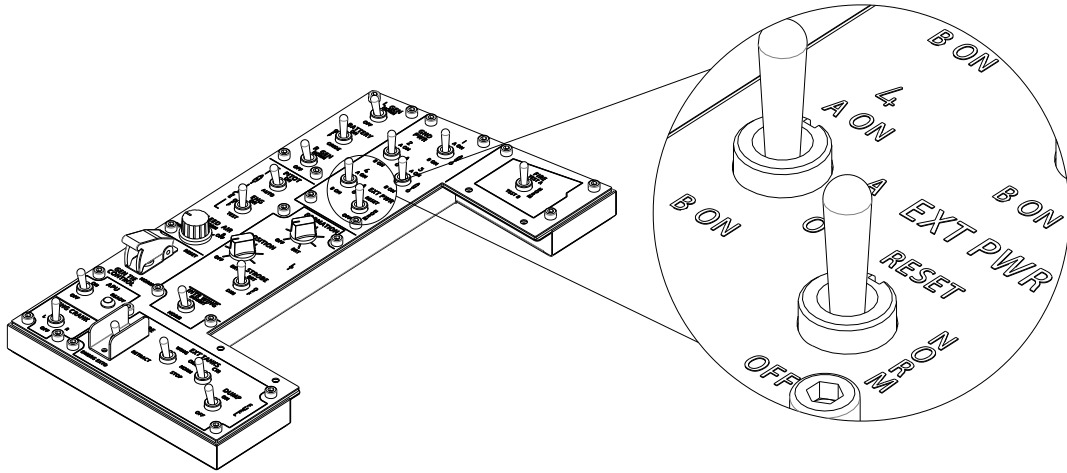


1. All characters on the panel are backlit;
2. All backlight brightness is adjustable
3. All switches come with an add function that can be set via our software.

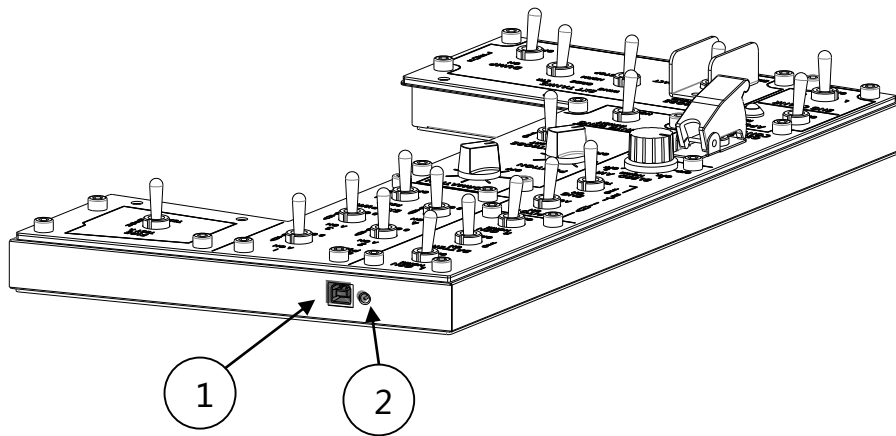


① USB port

② Power port (Back up)

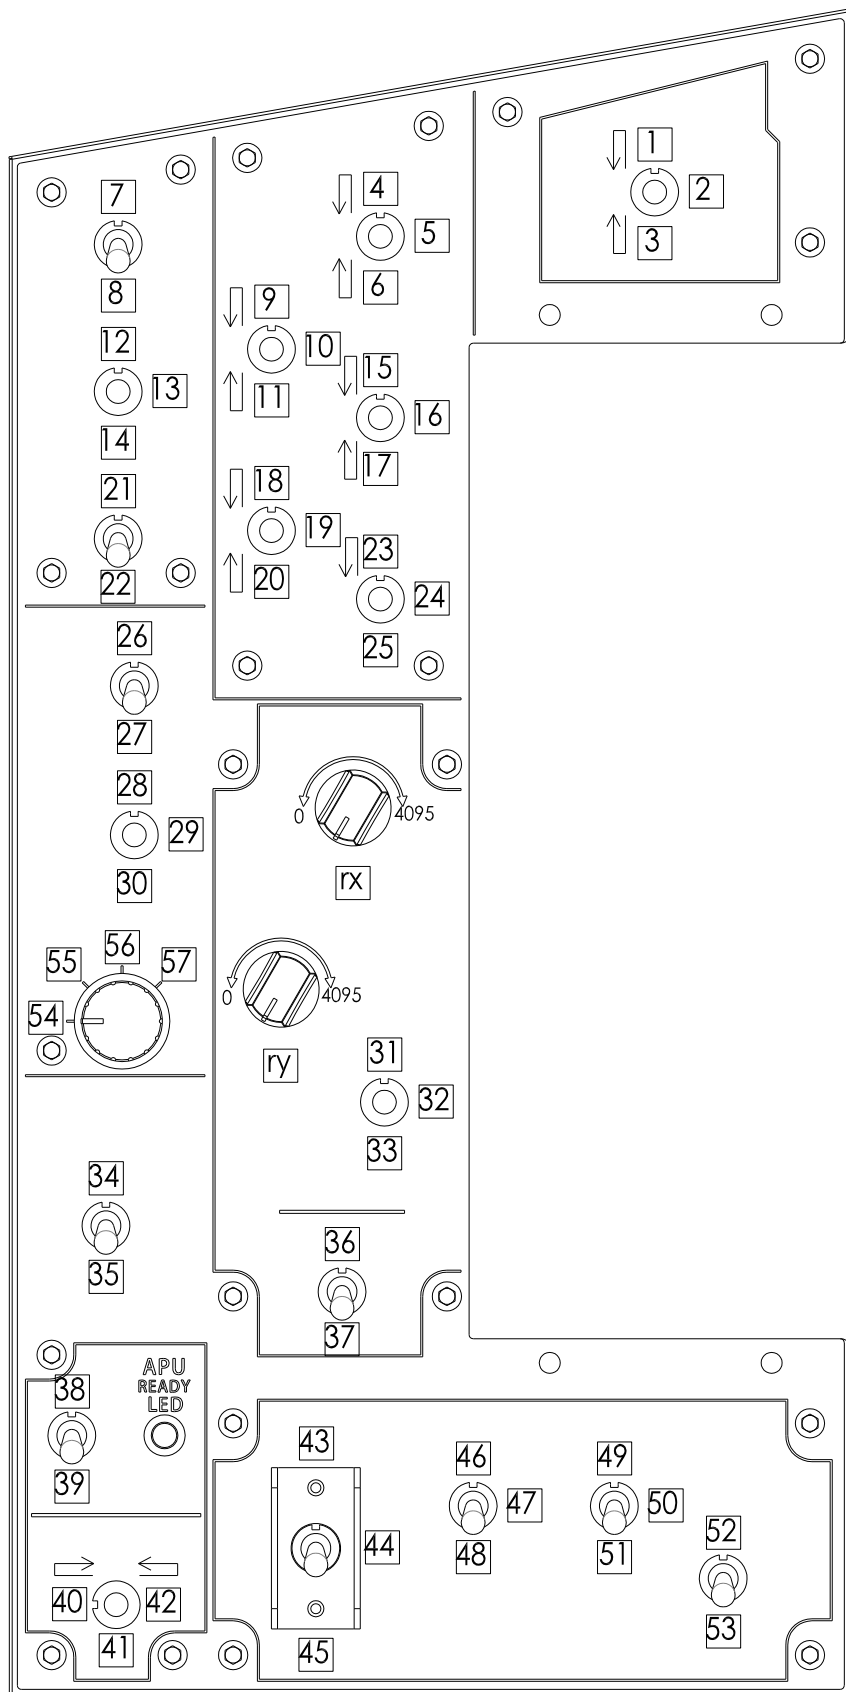

3.2 Side panel installation and uninstal (factory installed)

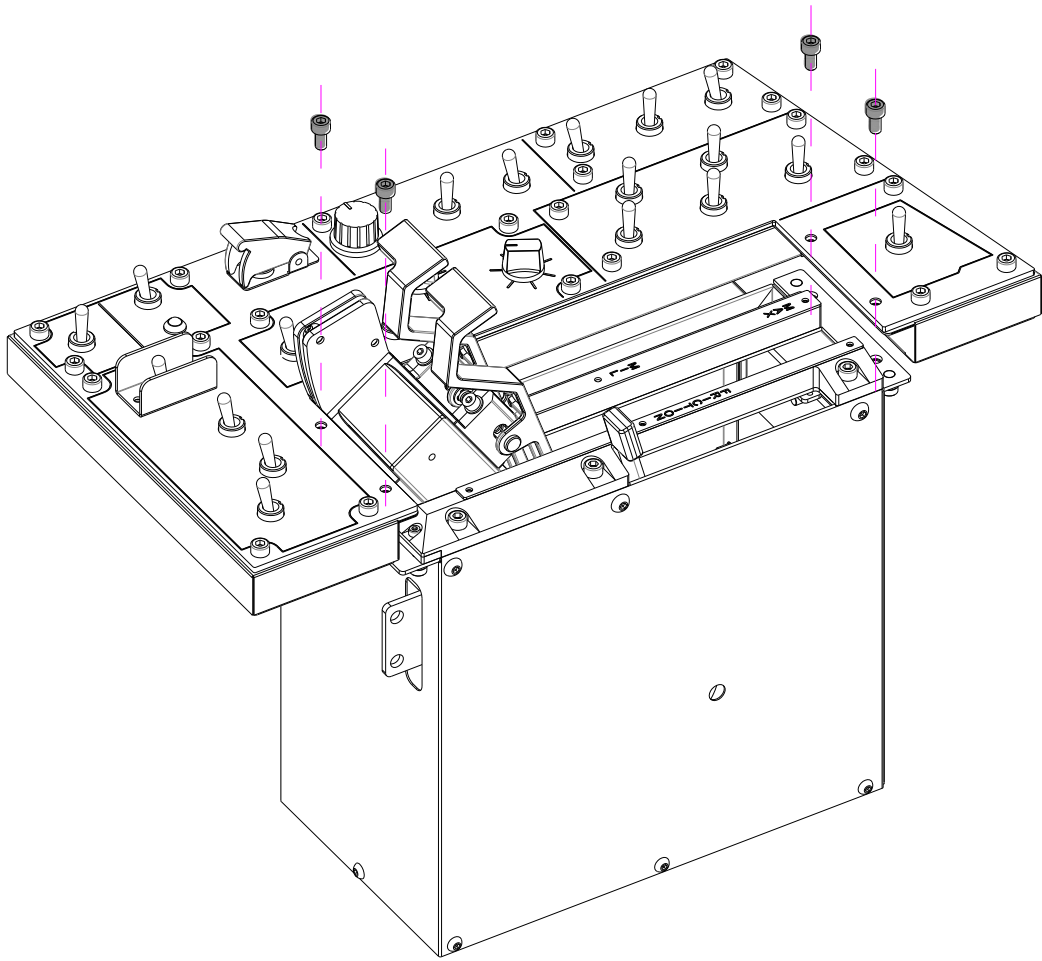


Install or remove the throttle side panel by installing or removing the 4 screws shown in the figure.


4 T1-HOLDER


4.1 Throttle desk mount adjustment instructions

The total thickness limits of the table and the block mat is 30mm to 70mm. Install the 30mm spacers as required.

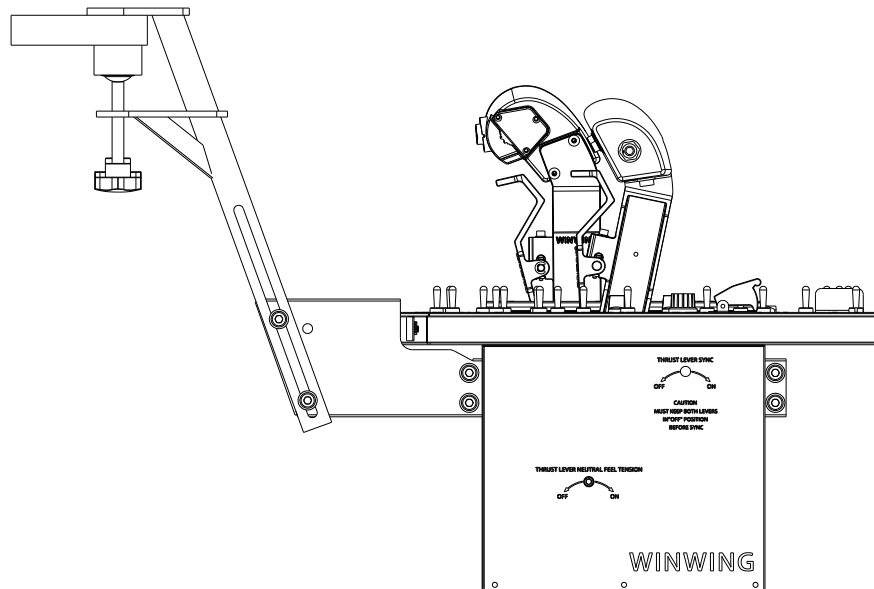

- You can change the height difference between the throttle side panel and the desktop by adjusting the desk mount holder Minimum 210mm Maximum 260mm

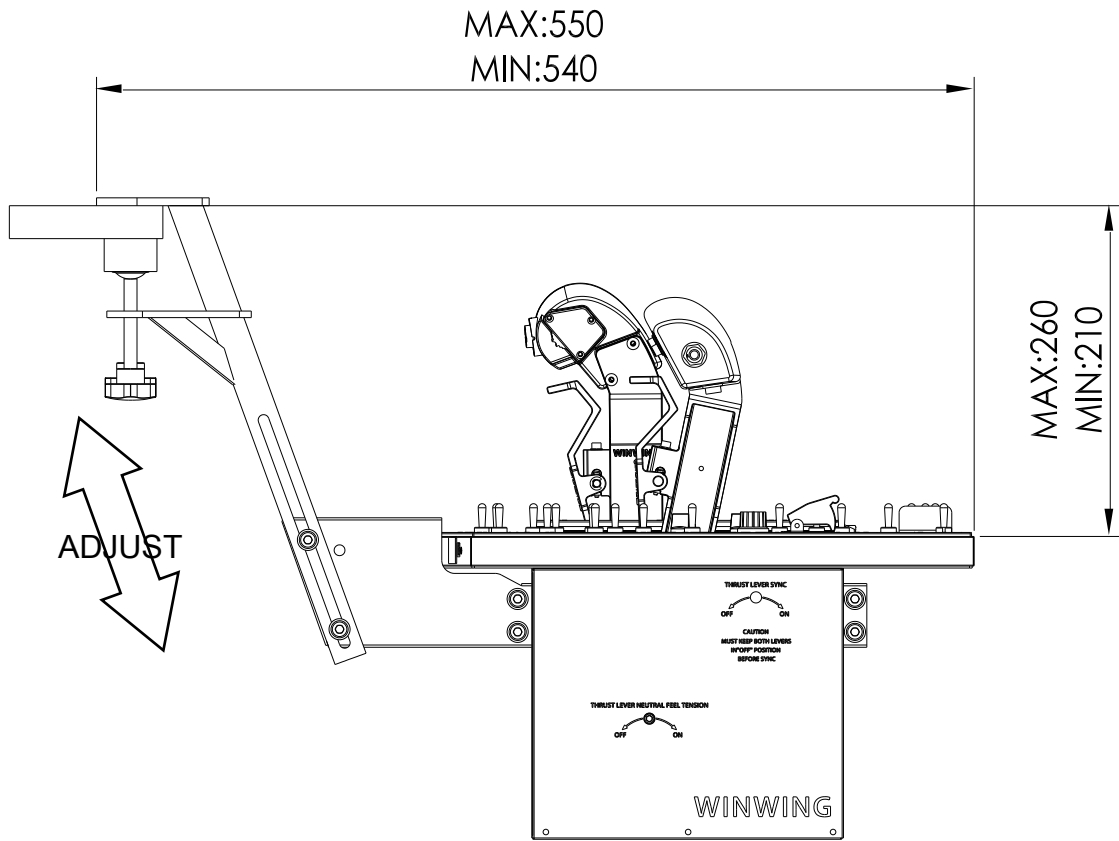

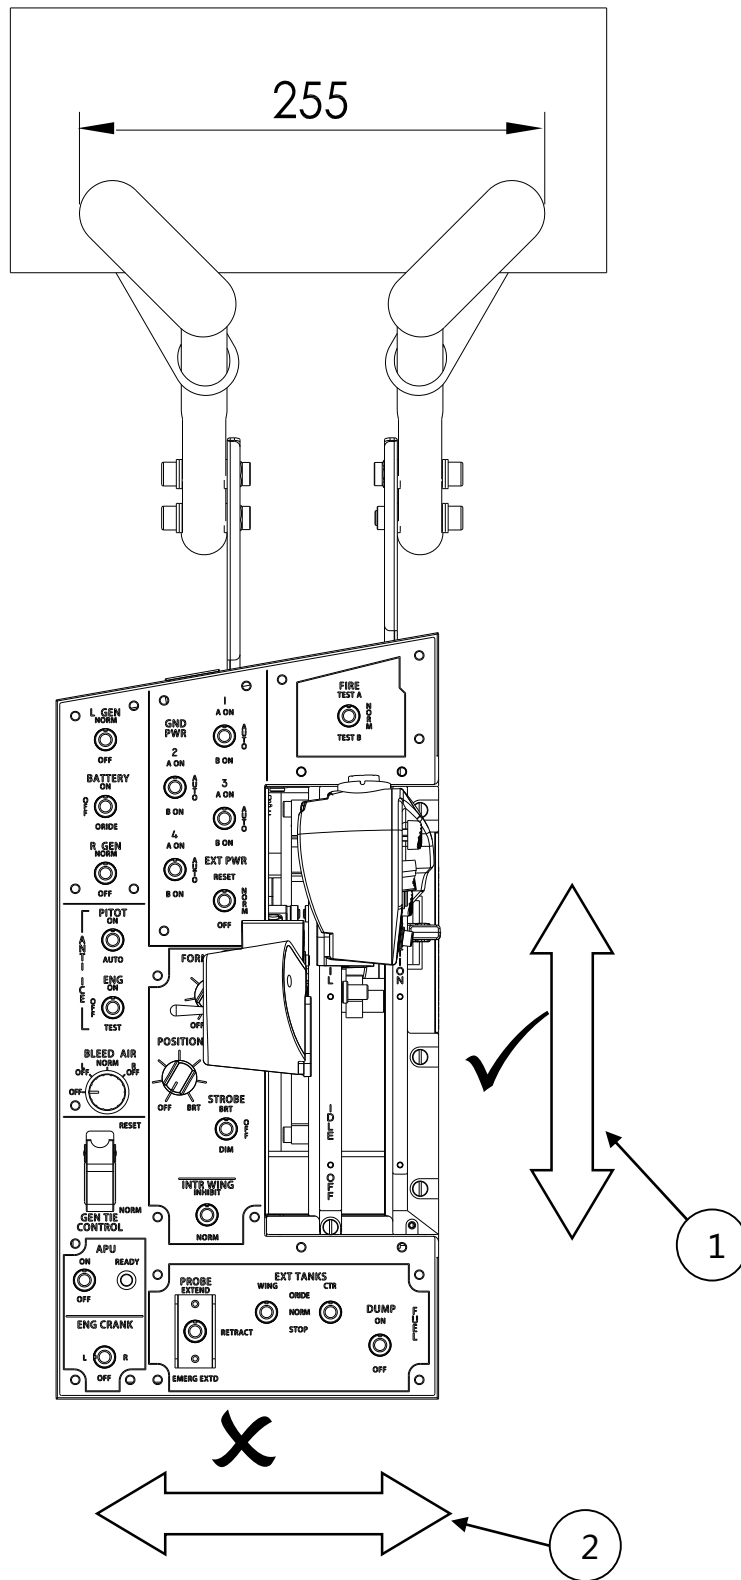


① Please follow the 1 arrow to use throttle.;

② Don't use throttle with arrow 2.

5 Other installation methods (Official advice)

5.1 Gaming chair installation

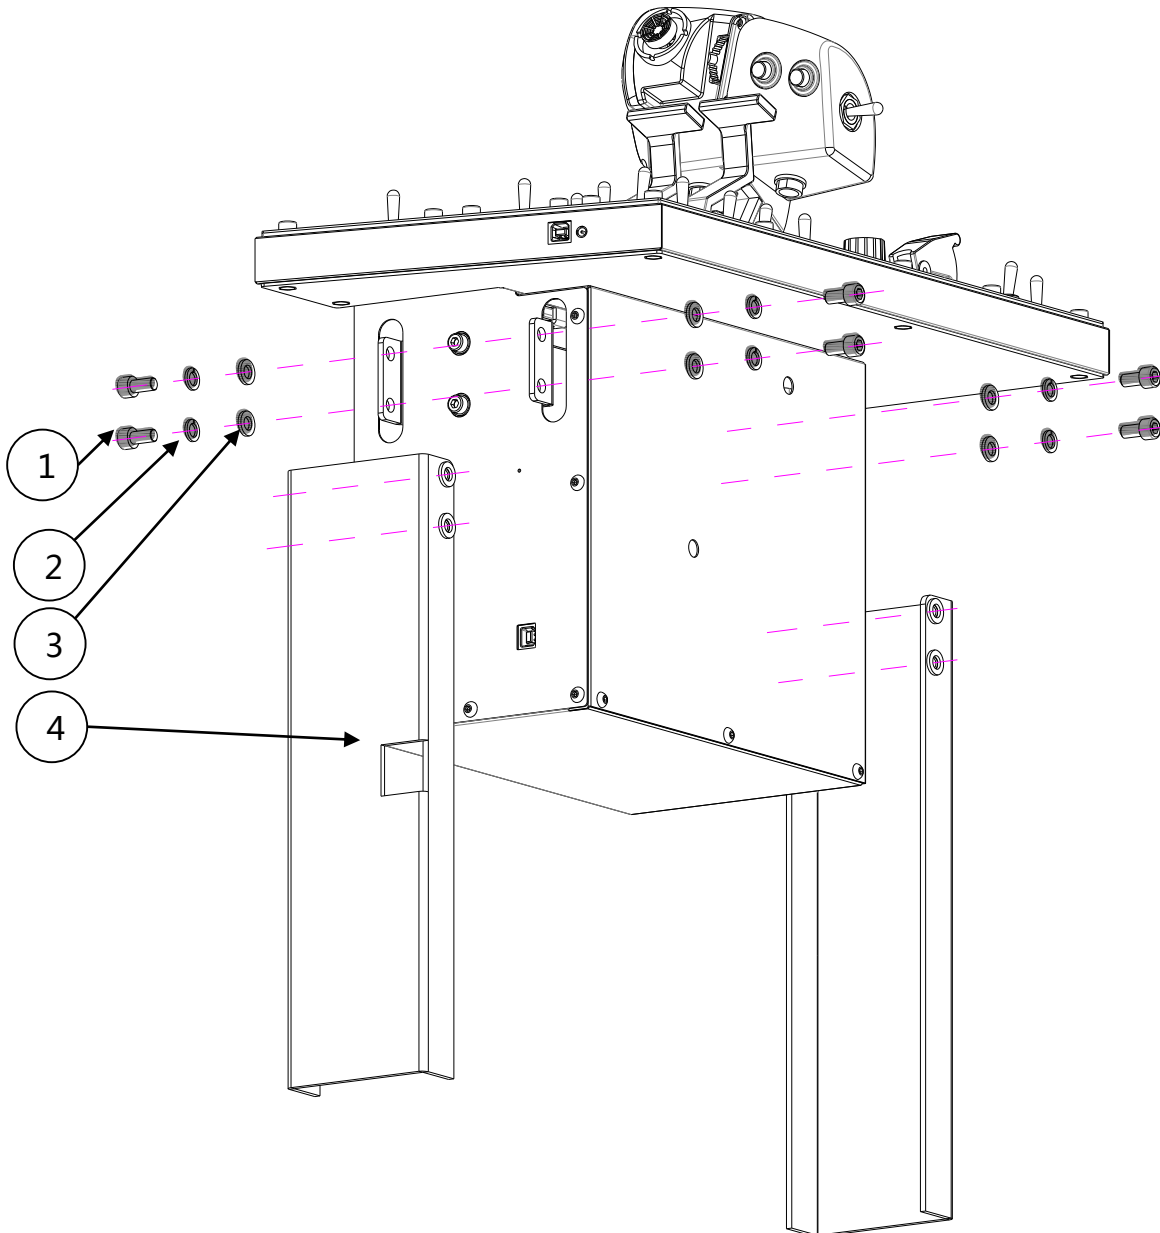


- This installation method requires your own accessories

he accessories are as follows:

- ① 8 of M6 14mm-type Allen screws
- ② 8 of M6 type Elastic screw gasket
- ③ 16 of M6 type Flat screw gasket

④ Avoid space for USB outlet


Mounting size as shown on picture

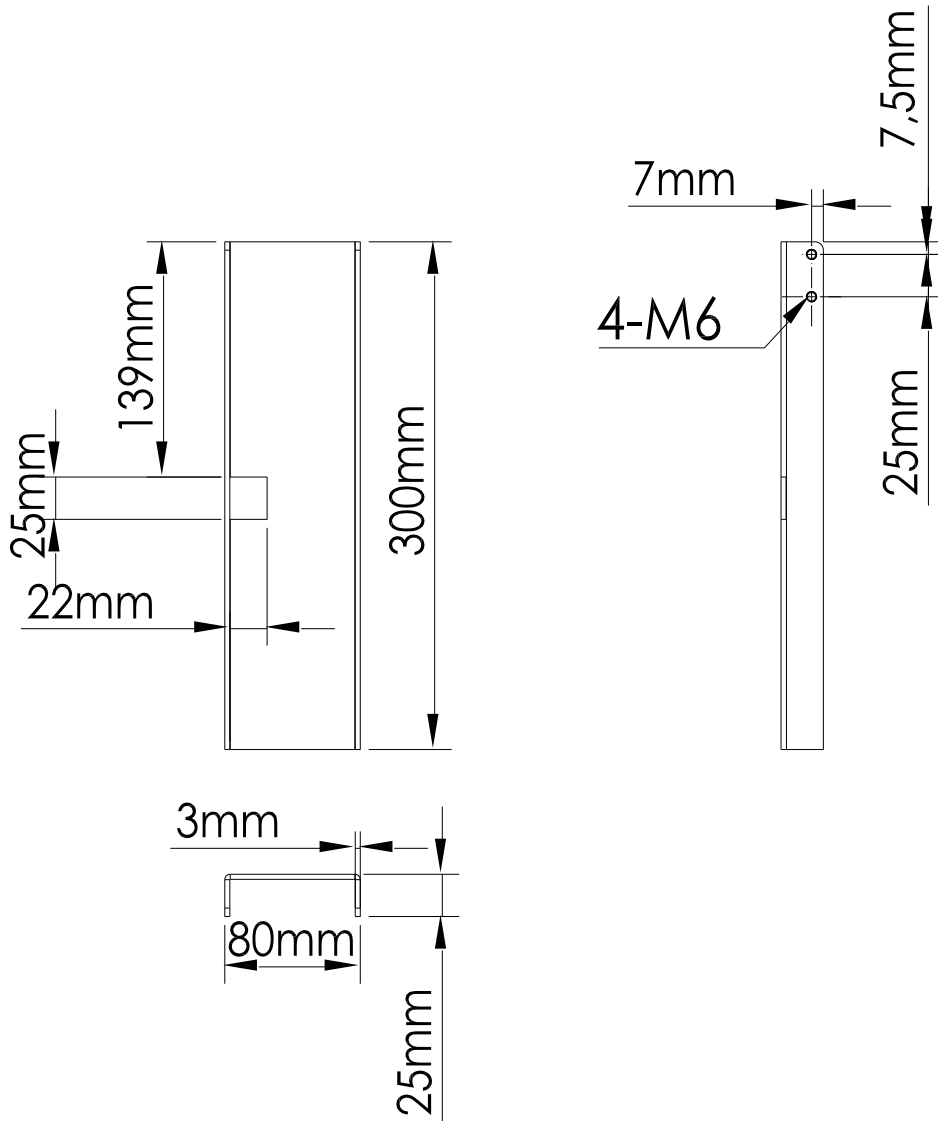

Dimensions Specifications: 80mm * 25mm sheet metal bending parts, rectangular tubes, profiles, etc.


- If you need 2D Template. Click to (www.winwing.cn)

5.2 Cockpit installation

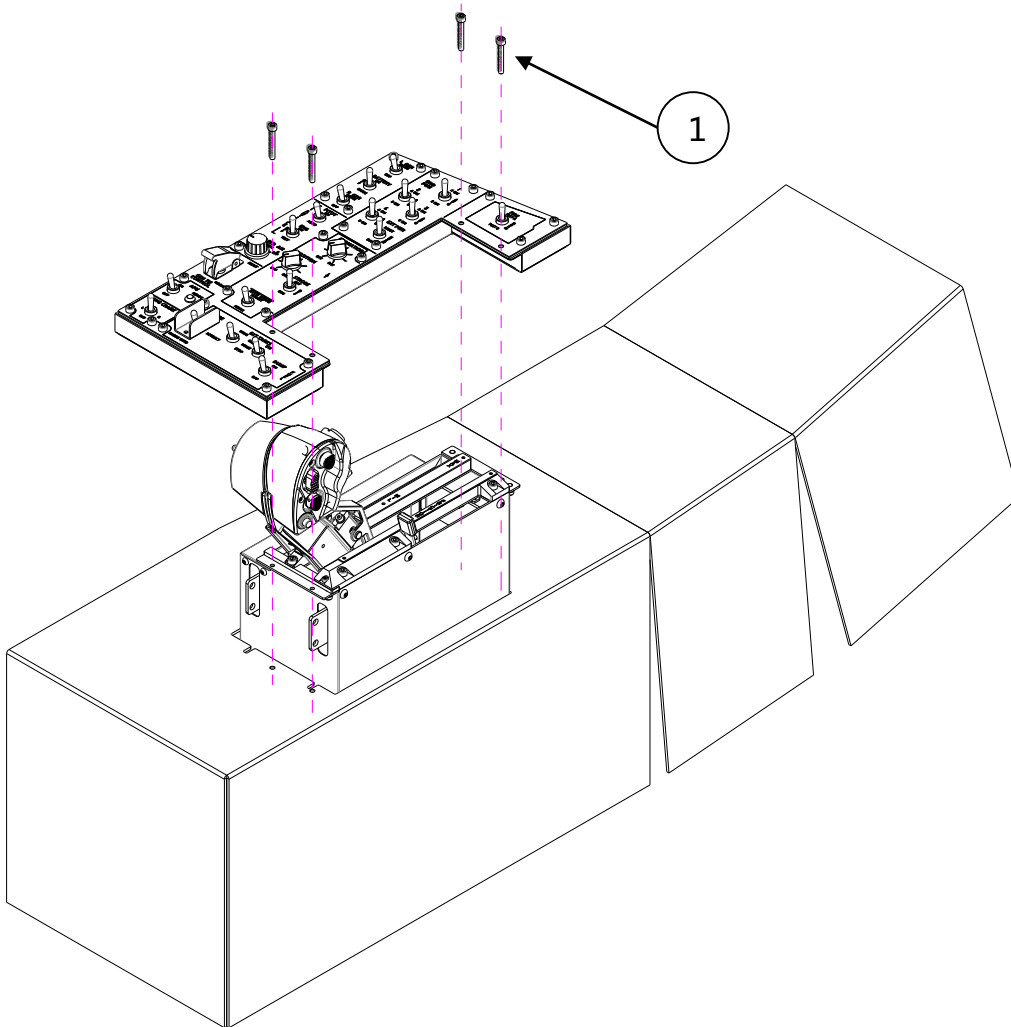

Remove the original 4 of M5 10mm-type Allen screws on the throttle side panel. Replace with 4 of M5 35mm-type Allen screws.

Mounting size as shown on picture The unit in the figure is mm

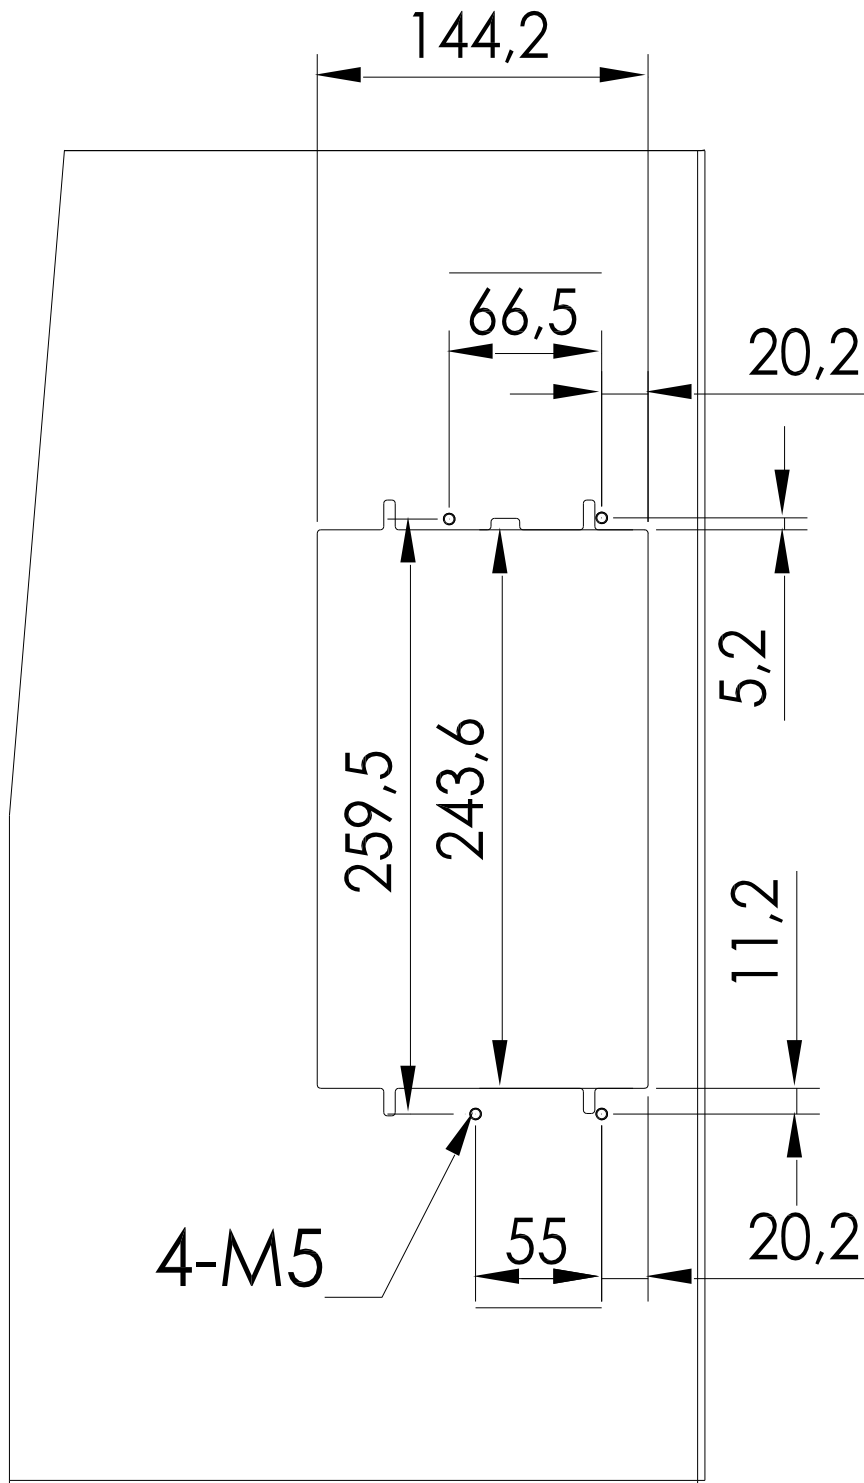

- If you need 2D Template. Click to (www.winwing.cn)